FORM MS-4217-92
REPLACES FORM MS-4217-71
FILE IN SECT. 2 OF SERVICE MANUAL

Illustrated Parts List

MODEL SERIES

60200 To 60297

TYPE NUMBERS
0010 through 0037
0110 through 0205
9135 through 9193
949000 through 949092
952000 through 952025

61200 To 61297

TYPE NUMBERS
0110 through 0144
949500 through 949582
952500 through 952523

**TO FIND
THE CORRECT NUMBER OF THE PART YOU NEED:
FOLLOW THE INSTRUCTIONS BELOW.**

A. Refer to Engine Model, Type and Code Number (formerly Serial Number) that is stamped on the blower housing or name plate of engine. (Engine type numbers such as 400108 are listed complete. Engine type numbers such as 0147 01 are listed herein only as 0147. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification). Then use the Illustrated Parts List covering these Model Series.

B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.

C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".

D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.


E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.

F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.


PRINTED IN U.S.A.

ORIGINAL
BRIGGS & STRATTON
SERVICE PARTS ®


60200 To 60297
61200 To 61297

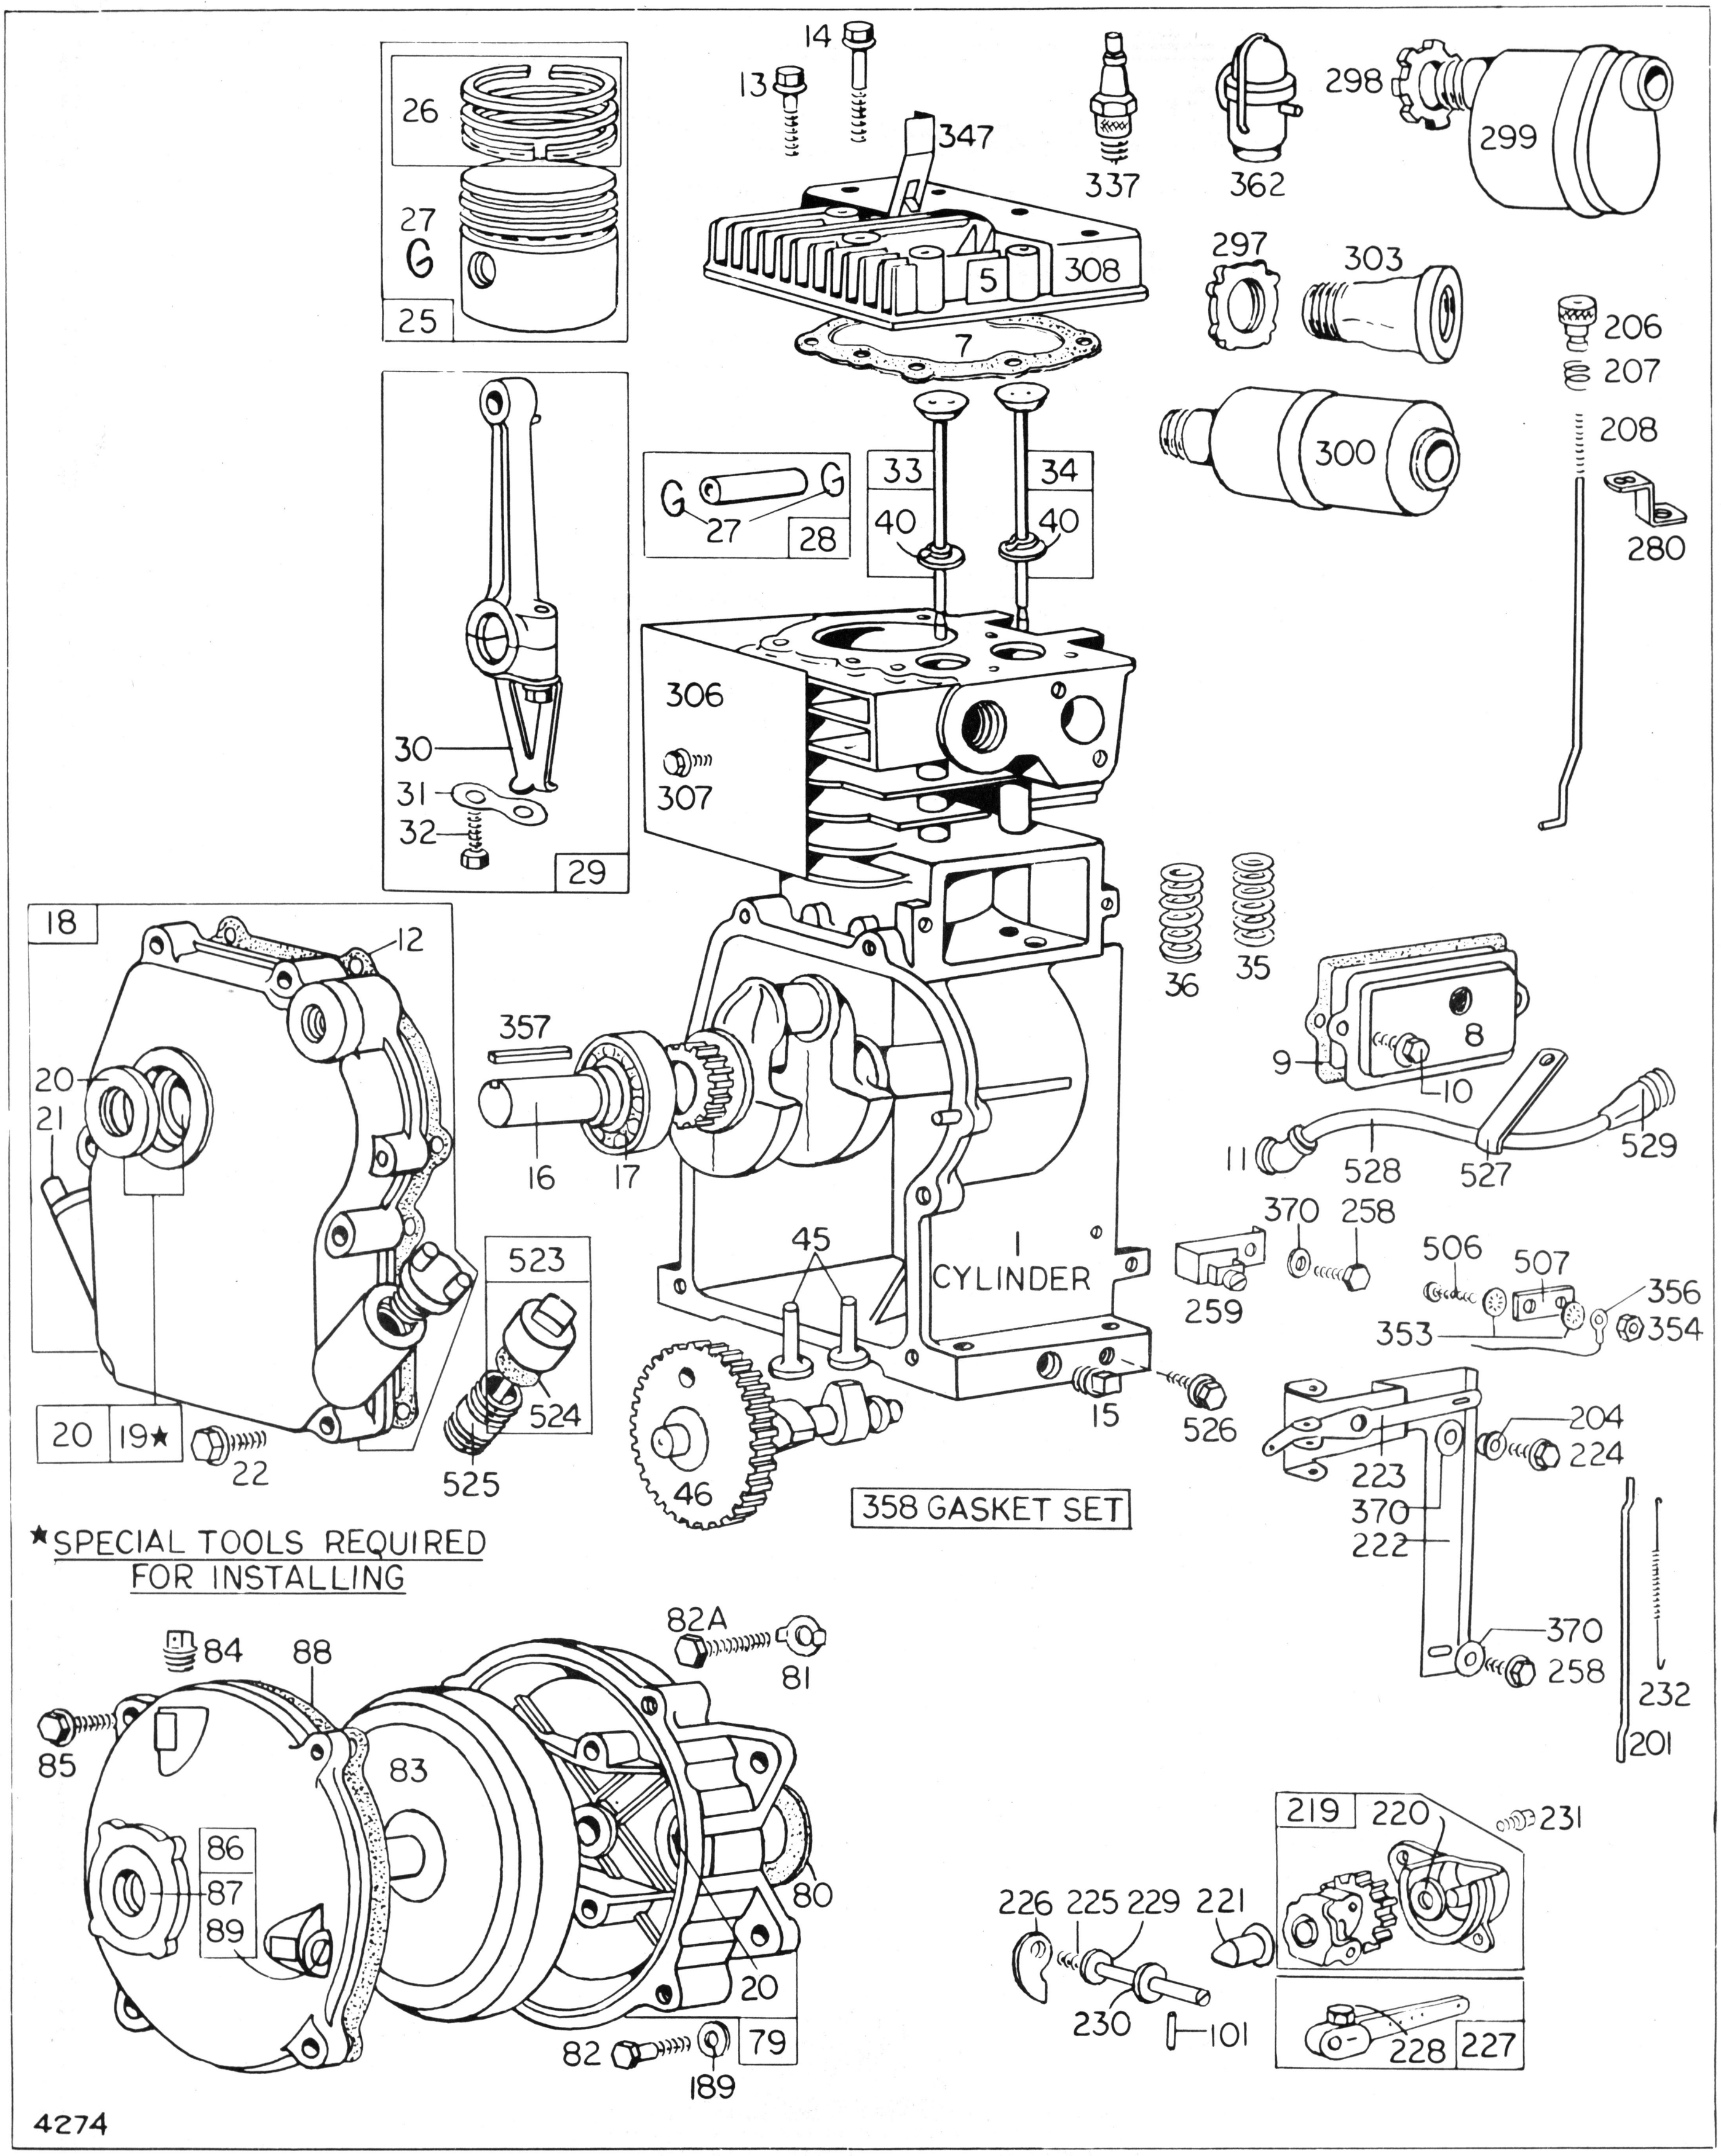


Assemblies include all parts shown in frames.

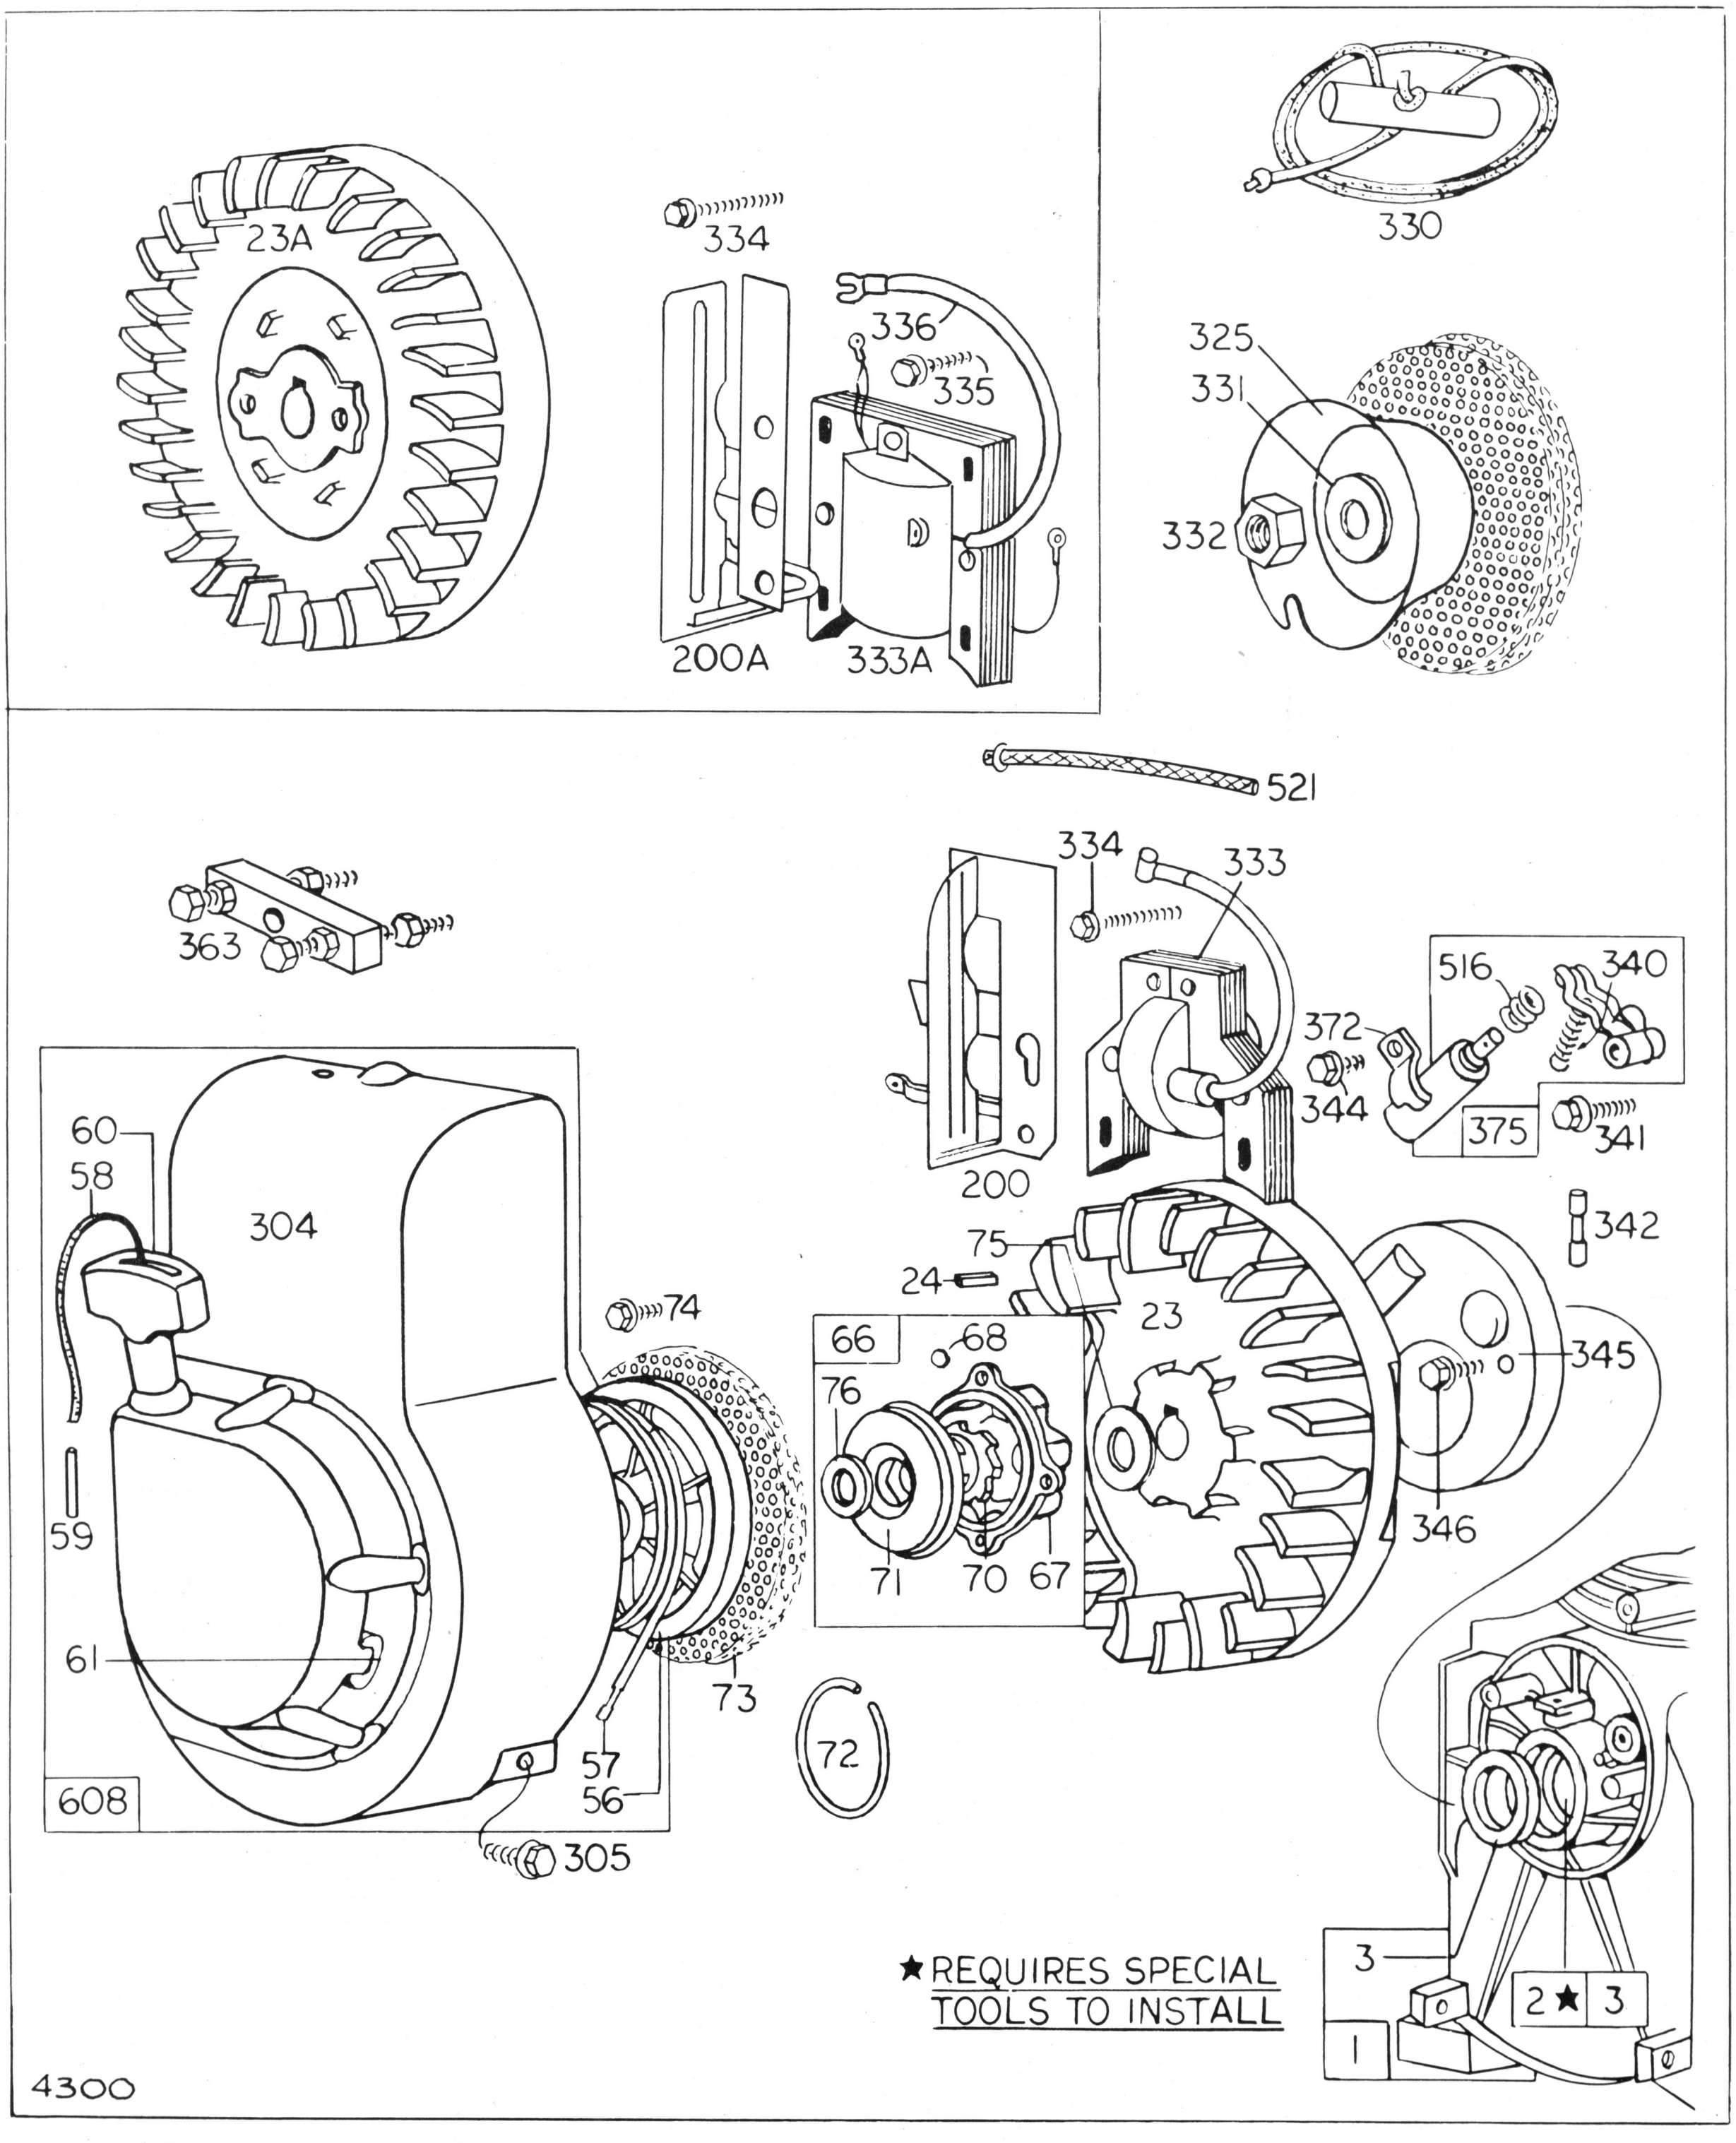

Assemblies include all parts shown in frames.

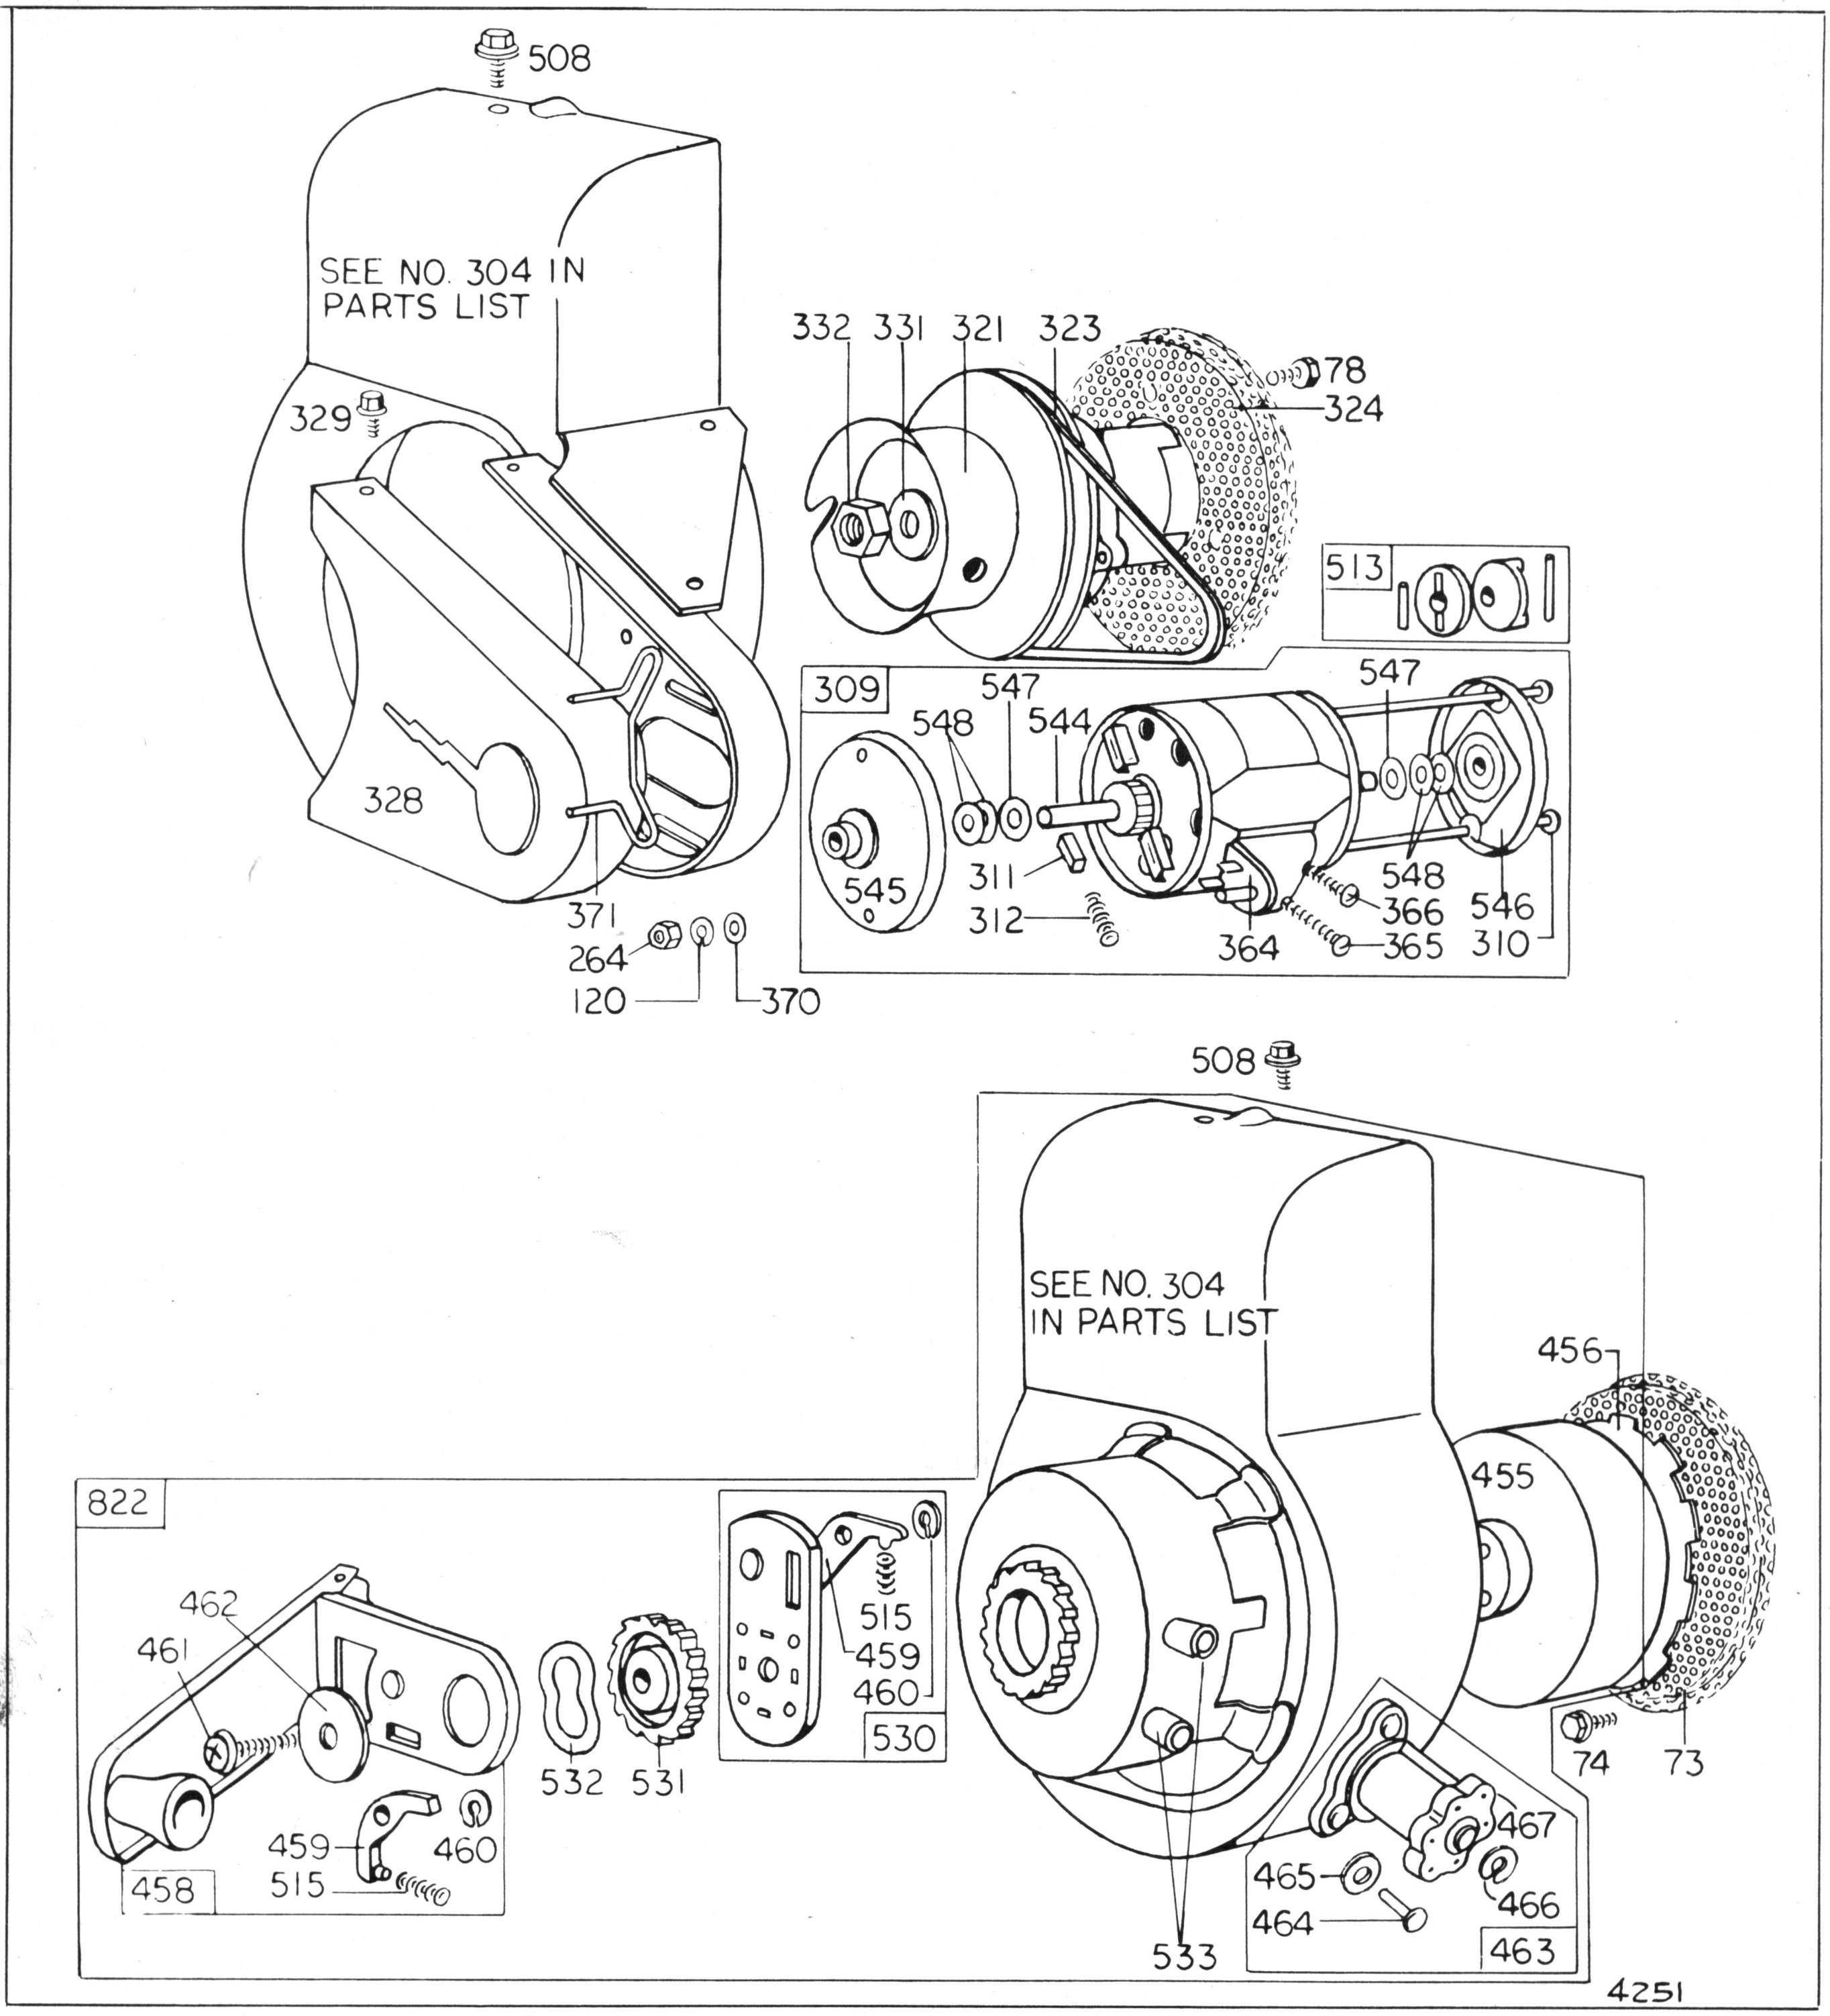

Assemblies include all parts shown in frames.

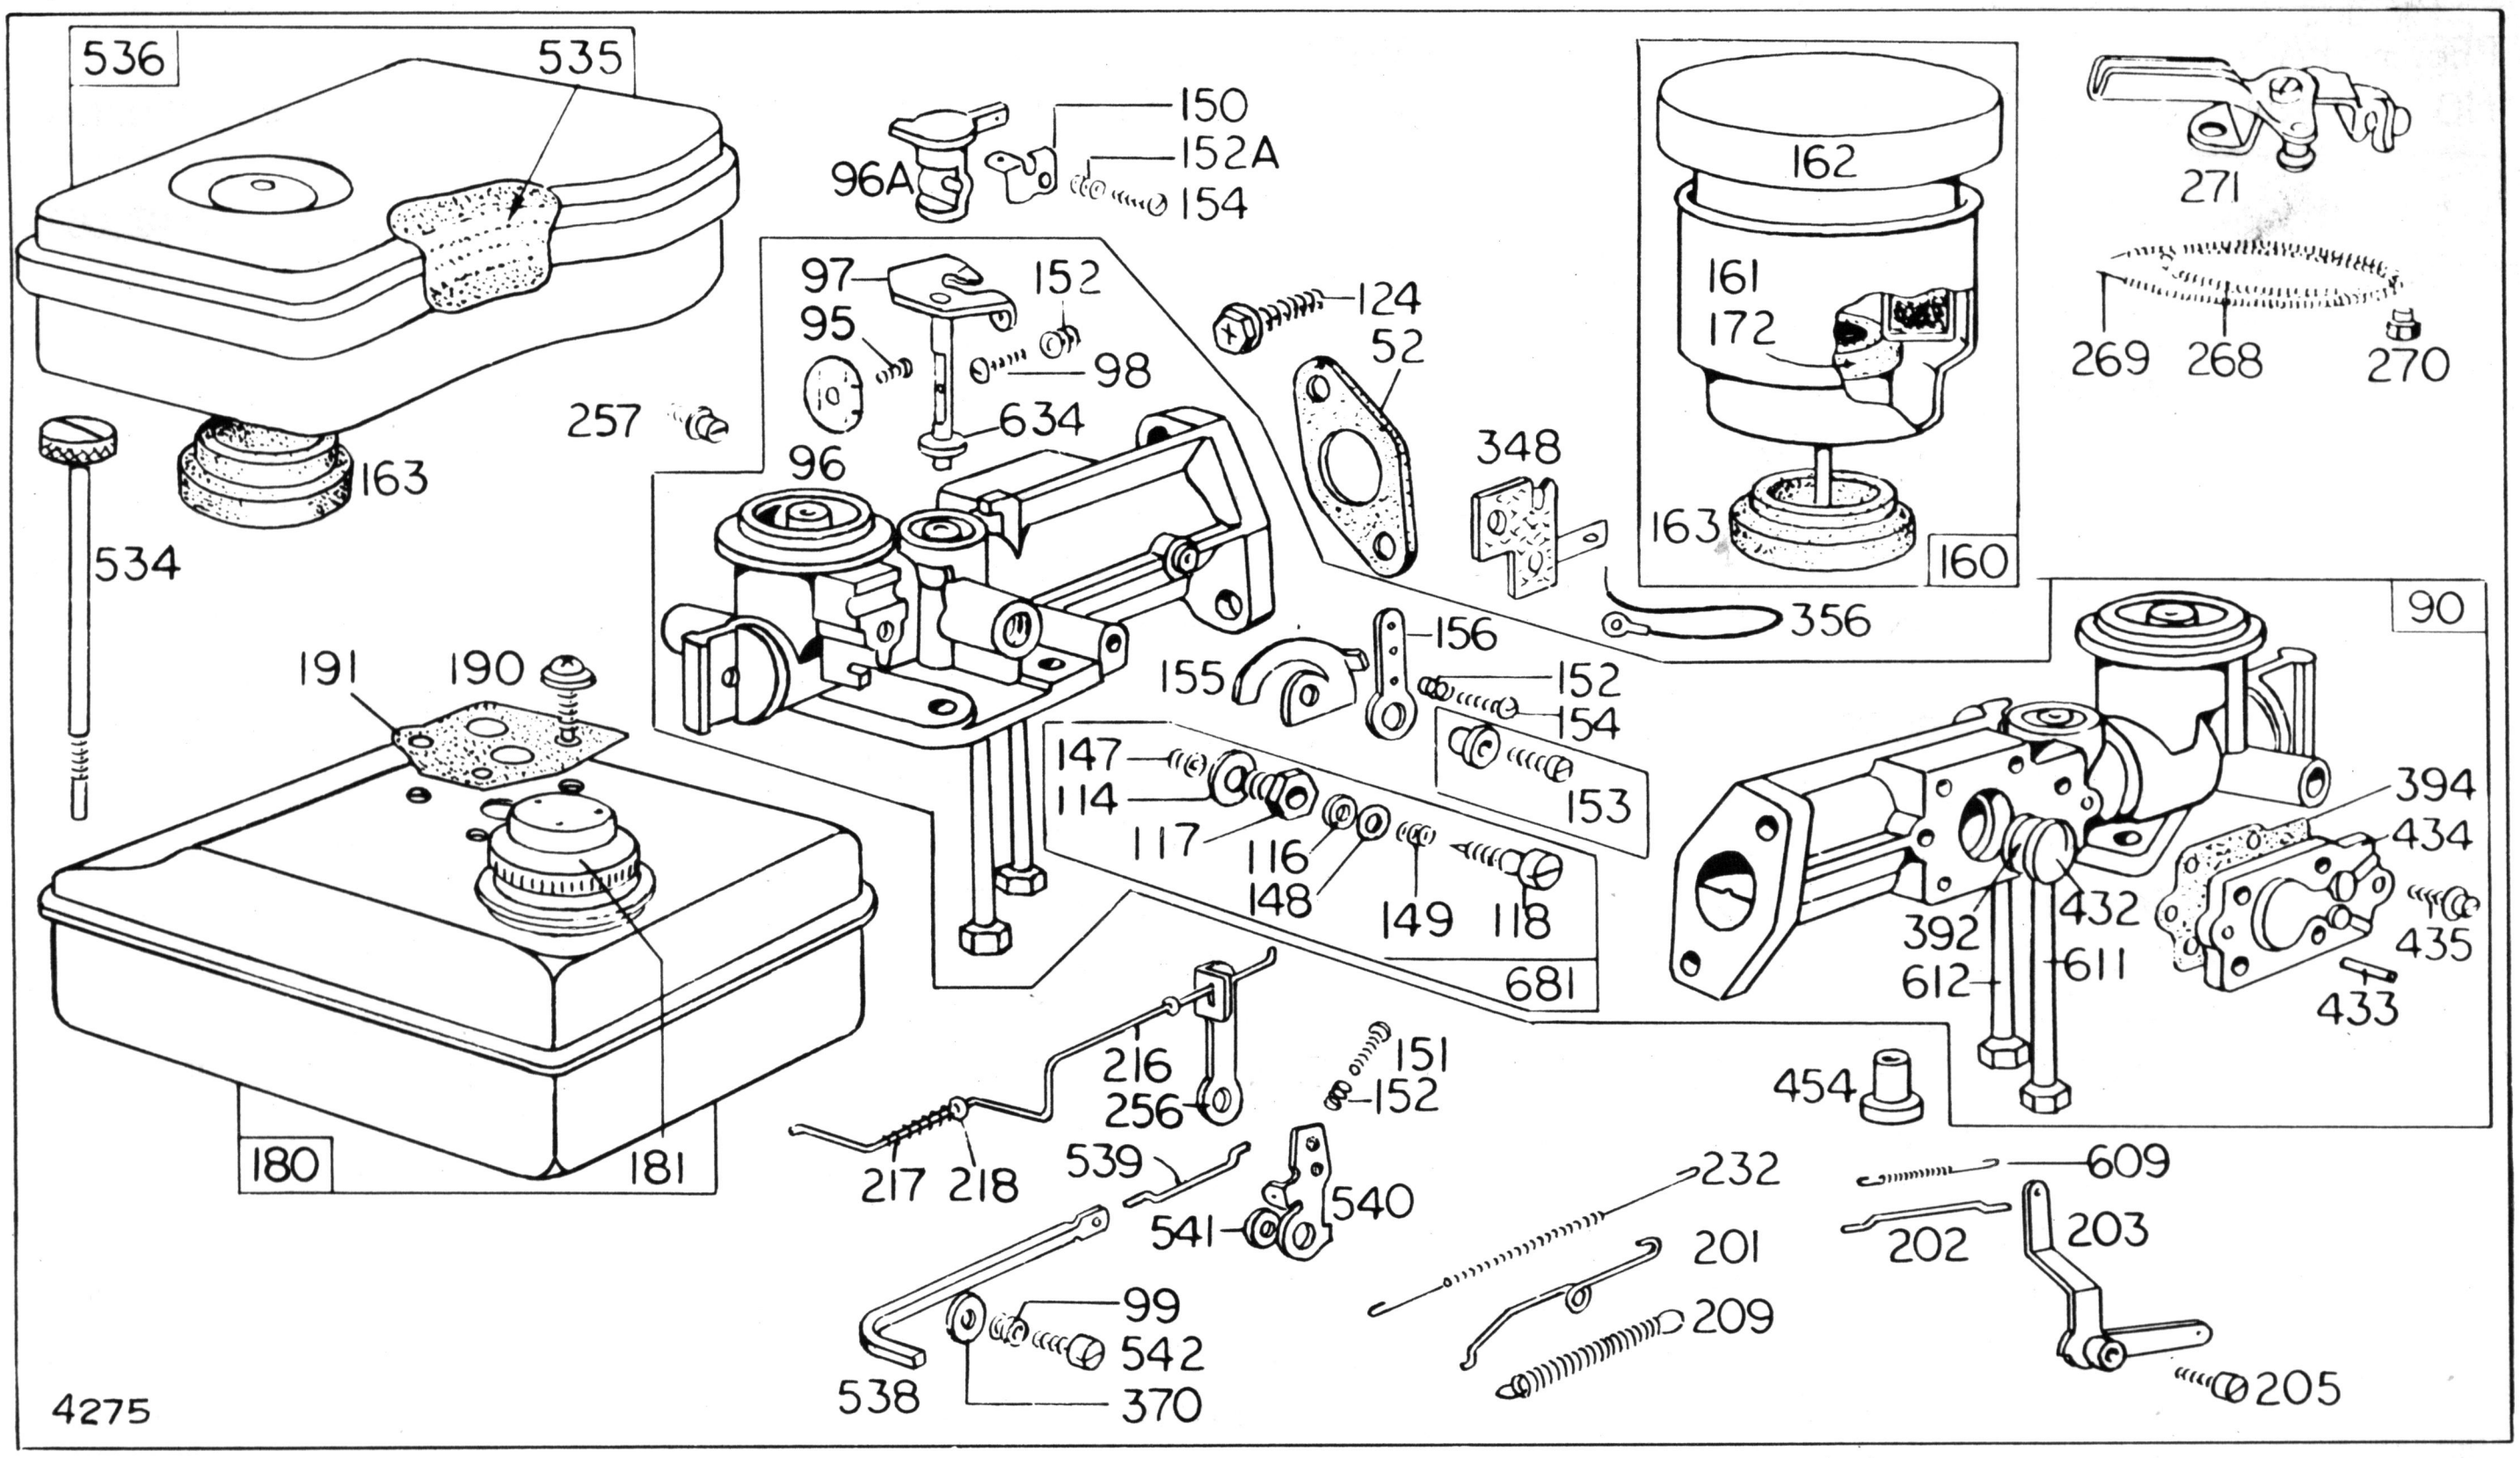

Assemblies include all parts shown in frames.

REF. NO.	PART NO.	DESCRIPTION
1	**296561**	Cylinder Assembly Used on *Model 60200* Series.
	296610	Cylinder Assembly Used on *Model 61200* Series.
2	**293708**	Bushing–Cylinder
	Note:	Requires special tools for installation.
3	**89660**	Seal–Oil
5	**211211**	Head–Cylinder
7	***27670**	Gasket–Cylinder Head
8	**294178**	Breather–Valve Chamber
9	***27549**	Gasket–Valve Cover
10	**93394**	Screw–Breather Mounting Sem
11	**66578**	Grommet–Breather Tube
12	***27586**	Gasket–Crankcase–.015" thick (Standard)
	***27617**	Gasket–Crankcase–.005" thick
	***27618**	Gasket–Crankcase–.009" thick
13	**93111**	Screw–Cylinder Head (1-15/16" long)
14	**93113**	Screw–Cylinder Head (2-5/16" long)
15	**91249**	Plug–Pipe, 1/4" Std., Square Head
16	**260271**	Crankshaft
	Note:	**260036** Crankshaft Used on *Model 60200* Series type Nos. 0120, 0139, 0152, 0155, 0165, 0170, 0171, 9136, 949015, 949017, 949031, 949033, 949062, 949070, 949071, 949074, 949082, 952015, 952017; also used on *Model 61200* Series type Nos. 0120, 0133, 0134, 0138, 0140, 0141, 949515, 949517, 949531, 949533, 949562, 949564, 949567, 949568, 949571, 949576, 949581, 949582, 952515, 952517.
		260037 Crankshaft Used on *Model 60200* Series type Nos. 0147, 0149, 0151, 0163, 0167, 0179, 949063, 949086, 949089, 949090; also used on *Model 61200* Series type Nos. 0143, 949551, 949566.
		260043 Crankshaft Used on *Model 60200* Series type Nos. 0125, 949020, 949022, 949035, 949037, 952020, 952022; also used on *Model 61200* Series type Nos. 0125, 949520, 949522,

* Included in Gasket Set–
Part No. 297275.

REF. NO.	PART NO.	DESCRIPTION
		949535, 949537, 949553, 949573, 952520, 952522.
		260100 Crankshaft Used on *Model 60200* Series type Nos. 0126, 0157, 0176, 0199, 949021, 949023, 949036, 949038, 949060, 952021, 952023; also used on *Model 61200* Series type Nos. 0126, 0135, 0137, 949521, 949523, 949536, 949538, 949550, 949555, 949574, 952521, 952523.
		260103 Crankshaft Used on *Model 60200* Series type Nos. 0036, 0121, 0143, 0160, 0172, 0174, 0180, 0188, 0201, 0204, 9137, 949016, 949018, 949032, 949034, 949045, 949054, 949058, 949061, 949069, 949079, 952016, 952018; also used on *Model 61200* Series type Nos. 0136, 949516, 949518, 949532, 949534, 949546, 949558, 949561, 952516, 952518.
		260116 Crankshaft Used on *Model 60200* Series type Nos. 0035, 0138, 0140, 0145, 0146, 9184, 9193, 949046, 949053, 949064, 949065, 949067, 949077, 949081; also used on *Model 61200* Series type Nos. 0142, 949548, 949549, 949552, 949557, 949563.
		260118 Crankshaft Used on *Model 60200* Series type Nos. 9138, 952025.
		260272 Crankshaft Used on *Model 60200* Series type Nos. 0110, 0115, 0144, 0150, 0154, 0164, 0173, 949010, 949012, 949027, 949029, 949068, 949073, 949075, 952010, 952012; also used on *Model 61200* Series type Nos. 0110, 0115, 949512, 949527, 949529, 952510, 952512.
		260493 Crankshaft Used on *Model 60200* Series type Nos. 0133, 0190, 949078; also used on *Model 61200* Series type No. 949579.
		260494 Crankshaft Used on *Model 60200* Series type Nos. 0037, 0141, 0148, 0196, 0200, 949049, 949055, 949080, 949085; also used on *Model 61300* Series type Nos. 949559, 949572, 949575, 949578.
		260495 Crankshaft Used on *Model 60200* Series type No. 0161; also used on *Model 61200* Series type Nos. 0132, 949554.
17	**99158**	Bearing–Ball
18	**294305**	Cover Assembly–Crankcase Used on Model 60201, 60202, 60203, 60206, 61201, 61202, 61203, 61206 Series. (See No. 294307 under Note for exceptions).
	Note:	**294306** Cover Assy.–Crankcase Used on Model 60231, 60232, 60233, 60236, 61231, 61232, 61233, 61236 Series.
		294307 Cover Assy.–Crankcase Used on Model 60201, 60202, 60206 Series type Nos. 952010, 952011, 952012, 952013 and on Model 60211, 60212, 60251, 60252, 60253, 60256 Series; also used on Model 61201, 61202 61206 Series type Nos. 952510, 952511, 952512 and on Model 61211, 61212, 61251, 61252, 61253, 61256 Series.
		296295 Cover Assy.–Crankcase Used on *Model 60200* Series type Nos. 949025, 949026, 949039, 949040; also used on *Model 61200* Series type Nos. 949525, 949526, 949539, 949540, 949566.
19	**293708**	Bushing–Crankcase Cover
	Note:	**220538, 293708** Bushings require special tools for installation.
	Note:	**220538** Bushing–Crankcase Cover Used on Model 60251, 60252, 60253, 60256, 61251, 61252, 61253, 61256 Series.

REF. NO.	PART NO.	DESCRIPTION
20	89660	Seal–Oil
	Note:	**293740** Seal–Oil Used on Model 60231, 60232, 60233, 60236, 61231, 61232, 61233, 61236 Series.
		294160 Seal–Oil Used on the auxiliary P. T. O. shaft on *Model 60200* Series type Nos. 949025, 949026, 949039, 949040; also used on *Model 61200* Series type Nos. 949525, 949526, 949539, 949540, 949566.
		294207 Oil Seal and Spacer Used on *Model 60200* Series type Nos. 0115, 0116, 0158, 0168, 0175, 0178, 0202, 0205, 952010, 952011, 952012, 952013; also used on *Model 61200* Series type Nos. 0115, 0116, 952510, 952511, 952512, 952513.
21	66768	Plug–Oil Filler
	Note:	**298858** Oil Minder Used on *Model 60200* Series type Nos. 0172, 0188, 0293.
22	93032	Screw–Crankcase Cover Mtg. Sem
	Note:	**92747** Screw–Crankcase Cover Mounting Sem Used in two top holes to mount cover on Model 60211, 60212, 60251, 60252, 60253, 60256, 61211, 61212, 61251, 61252, 61253, 61256 Series, and on *Model 60200* Series type Nos. 952010, 952011, 952012, 952013; also used on *Model 61200* Series type Nos. 952510, 952511, 952512, 952513.
23	296884	Flywheel–Magneto (Used on and after Serial No. 6212310.)
	Note:	**220971** Guard–Flywheel **93158** Screw–Guard Mounting Used on *Model 60200* Series type No. 0198; also used on *Model 61200* Series type No. 0144.
23A	295936	Flywheel Assembly (Used before Serial No. 6212310.)
24	61760	Key–Flywheel
25	295587	Piston Assembly–Std.
	Note:	**295455** Piston Assembly–Standard Used on *Model 61200* Series.
	295588	Piston Assembly–.010" O.S.
	Note:	**295456** Piston Assy.–.010" O.S. Used on *Model 61200* Series.
	295589	Piston Assembly–.020" O.S.
	Note:	**295457** Piston Assy.–.020" O.S. Used on *Model 61200* Series.
	295590	Piston Assembly–.030" O.S.
	Note:	**295458** Piston Assy.–.030" O.S. Used on *Model 61200* Series.
MODEL 60200 SERIES RING SETS:		
	Note:	For Chrome Piston Ring Set – standard size – order Part No. 297201.
26	294232	Ring Set–Standard Piston Consists of: **210471** Ring, Piston, Compression, Top **210472** Ring, Piston, Compression, Center **210473** Ring, Piston, Oil
	294224	Ring Set–.010" O.S. Piston Consists of: **210490** Ring, Piston Compression, Top, .010" O.S. **210489** Ring, Piston Compression, Center .010" O.S. **210491** Ring, Piston, Oil, .010" O.S.
	294225	Ring Set–.020" O.S. Piston Consists of: **210493** Ring, Piston, Top, .020" O.S. **210492** Ring, Piston, Center, .020" O.S. **210494** Ring, Piston, Oil, .020" O.S.
	294226	Ring Set–.030" O.S. Piston Consists of: **210496** Ring, Piston, Compression, Top, .030" O.S. **210495** Ring, Piston Compression, Center .030" O.S. **210497** Ring, Piston, Oil, .030" O.S.
MODEL 61200 SERIES RING SETS:		
	Note:	For Chrome Piston Ring Set – standard size – order Part No. 297201.
	295657	Ring Set–Standard Piston Consists of: **210796** Ring, Piston, Compression, Top, Standard

REF. NO.	PART NO.	DESCRIPTION
		210797 Ring, Piston, Compression, Center Standard
		295661 Ring, Oil (w/expander) Standard
	295658	Ring Set–.010" O.S. Piston Consists of:
		210799 Ring, Piston, Compression, Top, .010" O.S.
		210798 Ring, Piston, Compression, Center, .010" O.S.
		295662 Ring, Oil (w/expander) .010" O.S.
	295659	Ring Set–.020" O.S. Piston Consists of:
		210801 Ring, Piston, Compression, Top, .020" O.S.
		210800 Ring, Piston, Compression, Center .020" O.S.
		295663 Ring, Oil (w/expander) .020" O.S.
	295660	Ring Set–.030" O.S. Piston Consists of:
		210803 Ring, Piston, Compression, Top, .030" O.S.
		210802 Ring, Piston, Compression, Center .030" O.S.
		295664 Ring, Oil (w/expander) .030" O.S.
27	26026	Lock–Piston Pin
28	298909	Pin Assembly–Piston–Standard
	298908	Pin Assembly–Piston–.005" O.S.
29	294300	Rod Assembly–Connecting
30	220459	Dipper–Connecting Rod
31	220460	Lock–Connecting Rod Screw
32	92296	Screw–Connecting Rod
33	296676	Valve–Exhaust
	Note:	**26973** Valve–Exhaust (with hole in stem) Used on *Model 60200* Series type Nos. 0036, 0037, 0133, 0148, 0160, 0172, 0188, 0204, 949069, 949078, 949085; also used on *Model 61200* Series type Nos. 0143, 949546, 949568, 949578, 949579.
		260075 Valve–Exhaust (Stellite) (with hole in stem) Used on *Model 60200* Series type Nos. 0152, 0159, 0167, 0171, 0201, 9138, 949074, 949076, 949077, 952025; also used on *Model 61200* Series type No. 0141.
34	296677	Valve–Intake
	Note:	**230101** Valve–Intake Used on *Model 60200* Series type Nos. 0152, 0159, 0167, 0171, 0201, 9138, 949074, 949076, 949077, 952025; also used on *Model 61200* Series type No. 0141.
35	260552	Spring–Intake Valve
36	26478	Spring–Exhaust Valve
	Note:	**26826** Spring–Exhaust Valve Used on *Model 60200* Series type Nos. 0036, 0037, 0133, 0148, 0160, 0172, 0188, 0201, 0204, 9138, 949069, 949078, 949085, 952025; also used on *Model 61200* Series type Nos. 0141, 0143, 949546, 949568, 949578, 949579.
40	93312	Retainer–Valve Spring (Used with valves with groove in stem.)
	Note:	**23184** Retainer–Intake Valve Spring
		23187 Pin–Intake Valve Spring Retainer (Used with valves with hole in stem.)
		230126 Pin–Exhaust Valve Rotocap Retainer
		230127 Retainer–Exhaust Valve Rotocap
		292259 Rotocap–Exhaust Valve Used on *Model 60200* Series type Nos. 0036, 0037, 0133, 0148, 0160, 0172, 0188, 0201, 0204, 9138, 949069, 949078, 949085, 952025; also used on *Model 61200* Series type Nos. 0141, 0143, 949546, 949568, 949578, 949579.
45	230173	Tappet–Valve
46	210453	Gear–Cam
	Note:	**210804** Gear–Cam Used on *Model 60200* Series type Nos. 949025, 949026, 949039, 949040; also used on *Model 61200* Series type Nos. 949525, 949526, 949539, 949540, 949566.
52	*27355	Gasket–Intake Elbow Mounting (2 used)
56	298738	Pulley–Rewind Starter Used after Serial No. 6506301.
	Note:	**294088** Pulley–Rewind Starter Used before Serial No. 6507011.

REF. NO.	PART NO.	DESCRIPTION
57	294303	Spring–Rewind Starter
58	66694	Rope–Starter– 47-1/8" long (Used after Serial No. 6506301)
	Note:	**294584** Rope–Starter– 47-1/8" long (Used before Serial No. 6507011)
59	230228	Pin–Starter Grip
60	66728	Grip–Starter Rope
61	68618	Bumper–Starter Pulley
66	298310	Clutch Assy.–Rewind and Wind-Up Starter Used after Serial No. 6405220.
	Note:	**296468** Clutch Assy.– Rewind and Wind-Up Starter Used before Serial No. 6405250.
67	211383	Housing–Starter Clutch Used after Serial No. 6405220.
	Note:	**210400** Housing– Starter Clutch Used before Serial No. 6405250.
68	63770	Ball–Clutch
70	298436	Ratchet–Rewind and Wind-Up Starter Used after Serial No. 6405220.
	Note:	**296597** Ratchet– Rewind and Wind-Up Starter Used before Serial No. 6405220.
71	221653	Washer–Clutch Retainer Used after Serial No. 6405220.
	Note:	**221301** Washer–Clutch Retainer Used before Serial No. 6405250.
72	26032	Spring–Clutch Retainer
73	221661	Screen–Rotating Used after Serial No. 6405220.
	Note:	**220648** Screen– Starter Pulley Used before Serial No. 6405250.
74	93490	Screw–Rotating Screen Mounting Sem
75	220865	Washer–Spring
76	68238	Washer–Ratchet Sealing Used after Serial No. 6405220.
78	93014	Screw–Pulley Screen Mounting Sem
79	290779	Case Assembly–Gear
80	27667	Gasket–Gear Case
81	220234	Lock–Gear Case Mounting Screw
82	91541	Screw–Cap, Hex. Hd.–5/16-24 x 7/8"
82A	92279	Screw–Cap, Hex. Hd.–5/16-24 x 1-1/2"
83	211293	Shaft Assembly–Drive
	Note:	**211338** Shaft Assy.– Drive Used on *Model 60200* Series type No. 949060.
84	92617	Plug–Breather
85	92747	Screw–Gear Case Mounting Sem
86	291730	Cover Assembly– Gear Case
87	19011	Seal–Oil
88	27313	Gasket–Gear Case Cover
89	93448	Plug–Oil Drain, 1/4" pipe thread Used after Serial No. 6304170.
	Note:	**92015** Plug–Oil Drain, 1/8" pipe thread Used before Serial No. 6304180.
90	296785	Carburetor Assembly (Manual Choke)
	Note:	**296784** Carburetor Assembly (Manual Choke) Used on *Model 60200* Series type Nos. 0135, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0147, 0149, 0151, 0157, 0160, 0161, 0164, 0165, 0167, 0171, 0182, 0189, 949041, 949045, 949049, 949050, 949058, 949059, 949062, 949063, 949065, 949068, 949069, 949070, 949071, 949072, 949074, 949076, 949077, 949079, 949080, 949082, 949088, 949089, 949090, 949091; also used on *Model 61200* Series type Nos. 0132, 0134, 0137, 0138, 0140, 949546, 949554, 949555, 949578, 949581, 949582.
		296799 Carburetor Assembly (Choke-A-Matic) Used on *Model 60200* Series type Nos. 0132, 0186, 0194, 949060, 949066; also used on *Model 61200* Series type No. 949545.
		296800 Carburetor Assembly (Choke-A-Matic) Used on *Model 60200* Series type Nos. 0015, 0153, 0168, 0183, 0197, 0203, 0205, 949027, 949028, 949029, 949030, 949031, 949032, 949033, 949034, 949035, 949036, 949037, 949038, 949039, 949040, 949047, 949051, 949052,

* Included in Gasket Set– Part No. 297275.

REF. NO.	PART NO.	DESCRIPTION
		949057, 949083, 949084, 949087; also used on *Model 61200* Series type Nos. 949527, 949528, 949529, 949530, 949531, 949532, 949532, 949533, 949534, 949535, 949536, 949537, 949538, 949539, 949540, 949556, 949565, 949569, 949580.
		296825 Carburetor Assembly (Manual Choke) Used on *Model 60200* Series type Nos. 0133, 0138, 0148, 0152, 0159, 0191, 0195, 0196, 0199, 0201, 949078, 949085; also used on *Model 61200* Series type Nos. 0141, 949562, 949564, 949579.
		296903 Carburetor Assembly (Manual Choke) Used on *Model 60200* Series type No. 0174.
		296904 Carburetor Assembly (Manual Choke) Used on *Model 60200* Series type Nos. 0150, 0163, 0166, 0172, 0173, 0178, 0179, 0188, 0200, 949064, 949073, 949075, 949086; also used on *Model 61200* Series type Nos. 0133, 949568, 949572, 949573.
		296905 Carburetor Assembly (Manual Choke) Used on *Model 60200* Series type Nos. 0035, 0036, 0037, 0156, 0175, 0177, 0181, 0192, 0198, 0202, 949053, 949054, 949055, 949067; also used on *Model 61200* Series type Nos. 0136, 0144, 949549, 949557, 949558, 949559.
		296927 Carburetor Assembly (Manual Choke) Used on *Model 60200* Series type No. 0158; also used on *Model 61200* Series type Nos. 0135, 0139, 949570.
		297143 Carburetor Assembly (Mechanical Governor—Manual Choke) Used on *Model 60200* Series type Nos. 9136, 9137, 9184, 9193, 952010, 952011, 952012, 952013, 952015, 952016, 952017, 952018, 952020, 952021, 952022, 952023; also used on *Model 61200* Series type Nos. 952510, 952511, 952512, 952513, 952515, 952516, 952517, 952518, 952520, 952521, 952522, 952523.
		297153 Carburetor Assembly (Mechanical Governor—Manual Choke) Used on *Model 60200* Series type Nos. 9138, 9187, 952025.
		297223 Carburetor Assembly (Manual Choke) Used on *Model 61200* Series type No. 949574.
		297436 Carburetor Assembly (Manual Choke) Used on *Model 61200* Series type No. 949577.
		297903 Carburetor Assembly Used on *Model 60200* Series type No. 949092.
		297918 Carburetor Assembly Used on *Model 60200* Series type No. 0204.
95	**93385**	Screw—Throttle Valve Mounting Sem
96	**211203**	Valve—Throttle
96A	**211067**	Throttle—Carburetor
97	**298223**	Shaft and Lever—Throttle
98	**92634**	Screw—Machine, Rd. Hd.—5-40 x 5/8"
99	**26157**	Spring
101	**93043**	Pin—Governor Shaft
114	**66594**	Gasket—Needle Valve Nut
116	**65978**	Packing—Needle Valve
117	**230590**	Nut—Needle Valve
118	**23433**	Valve—Needle
120	**92290**	Washer—Lock—No. 10 x 1/16 x 3/64"
124	**93357**	Screw—Hex. Hd.
147	**230591**	Seat—Needle Valve
148	**22235**	Washer—Needle Valve (2)
149	**26336**	Spring—Needle Valve
150	**220105**	Connector—Governor Link
151	**92634**	Screw—Machine, Rd. Hd.—5-40 x 5/8"
	Note:	**93350** Screw—Machine, Rd. Hd.—5-40 x 3/4" Used on *Model 60200* Series type Nos. 0150, 0163, 0166, 949075, 949086; also used on *Model 61200* Series type No. 949572.

REF. NO.	PART NO.	DESCRIPTION
152	**260575**	Spring–Speed and Throttle Adjustment
152A	**260746**	Spring–Throttle Adjustment
153	**298031**	Screw–Carburetor Cam and Lever
	Note:	**93177** Screw–Bell Crank **230531** Collar–Bell Crank **220982** Washer Used on *Model 60200* Series type No. 949092. **93342** Screw–Bell Crank **230450** Collar–Bell Crank Used on *Model 60200* Series type No. 0158; also used on *Model 61200* Series type Nos. 0135, 0139, 949570, 949574, 949577.
154	**92634**	Screw–Machine, Rd. Hd.–5-40 x 5/8"
155	**220107**	Cam–Speed Adjuster
156	**220949**	Lever–Speed Adjuster
160	**294870**	Cleaner Assembly–Air
161	**293991**	Bowl–Air Cleaner
162	**294861**	Cover and Filter–Air Cleaner
163	***27660**	Gasket–Air Cleaner Mounting
171	**92129**	Nut–Hex.–1/4-28
172	**27795**	Gasket–Air Cleaner
180	**296377**	Tank Assembly–Fuel (1 quart)
	Note:	**296591** Tank Assy.–Fuel (2 quart) Used on *Model 60200* Series type Nos. 0132, 0135, 0139, 0140, 0141, 0142, 0143, 0144, 0146, 0147, 0149, 0150, 0151, 0157, 0158, 0160, 0161, 0163, 0164, 0165, 0166, 0167, 0171, 0172, 0173, 0178, 0179, 0182, 0186, 0188, 0189, 0194, 0200, 0204, 9138, 9187, 949041, 949045, 949049, 949050, 949058, 949059, 949060, 949062, 949063, 949064, 949065, 949066, 949068, 949069, 949070, 949071, 949072, 949073, 949074, 949075, 949076, 949077, 949079, 949080, 949082, 949086, 949088, 949089, 949090, 949091, 949092, 952025; also used on *Model 61200* Series type Nos. 0132, 0133, 0134, 0135, 0137, 0138, 0139, 0140, 949545, 949546, 949554, 949555, 949563, 949567, 949568, 949570, 949571, 949572, 949573, 949574, 949575, 949576, 949578, 949581, 949582. **296592** Tank Assy.–Fuel (3 quart) Used on *Model 60200* Series type Nos. 0133, 0138, 0148, 0152, 0159, 0174, 0191, 0195, 0196, 0199, 0201, 949078, 949085; also used on *Model 61200* Series type Nos. 0141, 949562, 949564, 949579.
181	**298425**	Cap–Fuel Tank
	Note:	**293270** Cap–Fuel Tank Used on type Nos. 0175, 0202. **297863** Cap–Fuel Tank Used on type Nos. 0175, 0202.
189	**90366**	Washer–Lock–5/16 x 1/8 x 1/16"
190	**93341**	Screw–Fuel Tank Mounting Sem
191	***27911**	Gasket–Fuel Tank Mtg.
	Note:	Engines using 3 quart require (2) Gaskets.
200	**297310**	Blade–Governor (Used on and after Serial No. 6212310.)
	Note:	**221456** Guide–Air Used on and after Serial No. 6212310 only on type No. Series 9000 to 9200 and 952010 to 952999.
200A	**294298**	Blade–Governor (Used before Serial No. 6212310.)
	Note:	**220692** Guide–Air Used before Serial No. 6212310 only on type No. Series 9000 to 9200 and 952010 & to 952999.
201	**260898**	Link–Governor Used after Serial No. 6602111 on *Model 60200, 61200* Series type Nos. 0010 to 0200.
	Note:	**260544** Link–Air Vane Governor and Throttle Uses: **260585** Spring Used before Serial No. 6602121 on type No. Series 0010 to 0200 and on all type Nos. 949010 to 949999.
	260565	Link–Governor Used with type No. Series 9000 to 9200 and 952010 to 952999.
202	**260563**	Link–Throttle
203	**297069**	Crank–Bell
	Note:	**221147** Crank–Bell Used on *Model 60200* Series type No. 949092. **221390** Crank–Bell Used on *Model 60200* Series type No. 0158;

* Included in Gasket Set–Part No. 297275.

REF. NO.	PART NO.	DESCRIPTION
		also used on *Model 61200* Series type Nos. 0135, 0139, 949570, 949574, 949577.
204	23688	Bushing–Governor Lever
205	230671	Screw–Bell Crank Mtg.
	Note:	**93342** Screw–Bell Crank Mounting Used on *Model 61200* Series type Nos. 949570, 949574, 949577.
206	230149	Nut–Control Rod
207	26855	Spring–Control Rod
208	230680	Rod–Control
209	260041	Spring–Governor Used after Serial No. 6602111 on type No. Series 0010 to 0200 and 949010 to 949999.
	Note:	**260545** Spring–Governor Used before Serial No. 6602121 on type No. Series 0010 to 0200 and 949010 to 949999. **260687** Spring–Gov. Used on *Model 60200* Series type Nos. 0183, 0186, 0197. **260662** Spring–Gov. Used on type No. 0205.
	260546	Spring–Governor Used only on type No. Series 9000 to 9200 and 952010 to 952999.
216	260449	Link–Choke
217	260189	Spring–Choke Link
218	221198	Washer–Choke Link (3)
219	296688	Governor Housing and Gear Assembly
220	221361	Washer–Thrust
221	230177	Cup–Governor
222	220691	Bracket–Mech. Gov.
223	221389	Lever–Governor Control
	Note:	**221379** Lever–Governor Control Used on *Model 60200* Series type Nos. 9184, 9187.
224	93067	Screw–Governor Lever Mounting Sem
225	230181	Shaft–Governor Lever
226	220381	Follower–Governor Crank
227	296087	Lever Assy.–Governor
228	93100	Screw–Governor Lever
229	220680	Washer–Thrust
230	22826	Washer–Spacer
231	93064	Screw–Governor Housing to Crankcase Cover Mounting Sem
232	260585	Spring–Governor Link Used before Serial No. 6602121 on type No. Series 0010 to 0200 and 949010 to 949999.
	260478	Spring–Governor Link Used on type No. Series 9000 to 9200 and 952010 to 952999.
256	220952	Lever–Speed Adjuster
257	93263	Screw–Fil. Hd., 10-32 x 3/8"
258	93062	Screw–Sem
259	294502	Bracket–Control Wire Casing
264	90355	Nut–Hex., 10-32
268	66986	Casing–Control Wire–48" long
	Note:	If longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.
269	26099	Wire–Control, 54" long
	Note:	If longer wire is needed, specify length in inches; if shorter wire is needed order No. 26099 and cut to required length.
270	63426	Locknut–Control Wire Casing
	Note:	**221370** Clamp–Casing **93496** Screw–Clamp Mounting Used on *Model 60200* Series type Nos. 0158, 9187, 949092; also used on *Model 61200* Series type Nos. 0135, 0139, 949570, 949574.
271	290568	Lever Assy.–Control
280	221384	Bracket
297	91811	Locknut–Exhaust Elbow
298	220859	Locknut–Muffler
299	294441	Muffler–Exhaust (Lo-Tone)
300	89966	Muffler–Exhaust
	Note:	**89945** Muffler–Exhaust Used on *Model 60200* Series type Nos. 9138, 952025. **292054** Muffler–Exhaust Used on *Model 60200* Series type Nos. 0186, 0202. **295905** Muffler–Exhaust Used on *Model 60200* Series type Nos. 0150, 0158, 0173, 0177, 0185, 0194, 949073, 949075.
303	91810	Elbow–Exhaust (45° Street)
	Note:	**91812** Elbow–Exhaust–90° Used on *Model 60200* Series type Nos. 9138, 949057, 952025; also used on *Model 61200* Series type No. 949569.
304	294260	Housing–Blower (For Rewind Starter)
	Note:	**294263** Housing–Blower (For Rope Starter) Used on Model 60201, 60231, 60251, 61201,

REF. NO.	PART NO.	DESCRIPTION
		61231, 61251 Series.
		294338 Housing–Blower (For Rewind Starter) Used on *Model 60200* Series type Nos. 0188, 0195, 0204, 0205.
		295190 Blower Housing and Brackets (For Electric Starter) Used on Model 60203, 60233, 60253, 61203, 61233, 61253 Series.
		296792 Housing–Blower (For Wind-Up Starter) Used on Model 60206, 61206 Series.
		296894 Housing–Blower (For Rewind Starter) Used on *Model 60200* Series type No. 0185.
305	**93158**	Screw–Blower Housing Mounting
	Note:	**93294** Screw–Blower Housing Mounting Used on Model 60203, 60206, 61203, 61206 Series.
306	**220478**	Shield–Cylinder
307	**93042**	Screw–Cylinder Shield Mounting Sem
308	**220581**	Cover–Cylinder Head
309	**295188**	Motor–Electric Starter
310	**93239**	Bolt–Case
311	**295697**	Brush–Starter Motor
312	**260404**	Spring–Brush
321	**210711**	Pulley–Starter
323	**67228**	Belt–Vee
324	**220648**	Screen–Electric Starter Pulley
325	**293959**	Pulley with Screen–Rope Starter (1/2" hole in Pulley)
	Note:	For Pulley with Screen with 5/8" hole in Pulley – order No. 298731.
328	**221038**	Guard–Belt
329	**93014**	Screw–Belt Guard Mounting Sem
330	**294584**	Rope–Starter
331	**62577**	Washer–Flywheel (1/2" hole)
	Note:	For Washer with 5/8" hole – order No. 220865.
332	**91708**	Nut–Flywheel (1/2-20 left hand thread)
	Note:	For Flywheel Nut with 5/8-18 right hand thread – order No. 92284.
333	**298502**	Armature–Magneto (Used on and after Serial No. 6212310.)
333A	**291617**	Armature–Magneto (Used before Serial No. 6212310.)
334	**93381**	Screw–Armature Mounting Sem
335	**93381**	Screw–Armature Mounting Sem
336	**292149**	Cable–Ignition (Standard–Used before Serial No. 6212310– Cables used after this Serial No. are integral with the ignition coil.)
	Note:	Ignition cable for type No. 949049 is molded into the coil and is not replaceable.
		294577 Cable–Ignition Used on *Model 61200* Series type No. 949576 before Serial No. 6212310.
337	**298809**	Plug–Spark (with gasket) (1-1/2" high–38 mm.)
	Note:	Spark Plugs 298809 and 29693 use Ignition Cable Terminal No. 221798.
		29693 Plug–Spark (with gasket) (2" high–51 mm.)
340	**26018**	Spring–Breaker Arm
341	**93381**	Screw–Breaker Arm Mounting Sem
342	**65704**	Plunger–Breaker Point
344	**93042**	Screw–Condenser Clamp Mounting Sem
345	**220366**	Cover–Breaker Point and Condenser
346	**93014**	Screw–Dust Cover Mounting
347	**221808**	Switch–Stop
348	**296110**	Plate Assembly–Stop Switch Insulator
353	**92791**	Washer–Lock–Shakeproof (2)
354	**90576**	Nut–Hex. –8-32
356	**296185**	Wire–Ground
357	**91539**	Key–3/16'' Square
358	**297275**	Gasket Set
362	**291630**	Shield–Spark Plug (with stop switch)
	Note:	**66538** Elbow–Spark Plug Used on type No. 0197.
363	**19069**	Puller–Flywheel (Optional Accessory)
364	**295698**	Plug–Connector
365	**93241**	Screw–Plug Mtg. (long)
366	**93240**	Screw–Plug Mtg. (short)
370	**66432**	Washer–Plain
371	**260275**	Restrictor–Belt
372	**220477**	Clamp–Condenser
375	**294628**	Breaker Points and Condenser Set
	Note:	**299061** Ignition Kit Includes: **294628** Point Set, **65704** Plunger, **61760** Key–Flywheel
392	**260455**	Spring–Fuel Pump Diaphragm
394	**270026**	Diaphragm
414	**220982**	Washer–Bell Crank
432	**221377**	Cap–Spring
433	**93265**	Pin–Diaphragm Cover
434	**210959**	Cover–Diaphragm
435	**93141**	Screw–Diaphragm Cover

REF. NO.	PART NO.	DESCRIPTION
454	**296178**	Housing–Fuel Pipe Screen (for use on 3/16'' O. D. Brass Pipe)
	296191	Housing–Fuel Pipe Screen (for use on 1/8'' O. D. Brass Pipe)
455	**296455**	Cup, Hub and Spring Assembly
456	**221222**	Plate–Retainer
458	**296305**	Handle Assy. – Cranking
459	**221332**	Pawl–Ratchet
460	**93272**	Retainer–Ratchet Pawl
461	**93231**	Screw–Handle Mounting
462	**221237**	Washer–Handle Mounting
463	**296445**	Holder Assy. – Flywheel
464	**93291**	Rivet–Holder Assy. Mounting
465	**221226**	Washer–Holder Assembly Mounting
466	**93272**	Retainer–Holder Control Knob
467	**211017**	Knob–Control
506	**90200**	Screw–Machine, Fil. Hd.–8-32 x 1/2''
507	**66895**	Insulator
508	**93294**	Screw–Blower Housing Mounting Sem
513	**296567**	Clutch Assembly– Electric Starter
515	**260537**	Spring–Ratchet Pawl
516	**260374**	Spring–Connector
521	**297973**	Shielding–Ignition Cable Used after Serial No. 6209290 on Cables Integral with Ignition Coil on *Model 60200* Series type No. 949071; also used on *Model 61200* Series type No. 949576.
523	**69345**	Cap–Oil Filler
524	**65304**	Gasket– Oil Filler Cap
525	**91258**	Nipple–Oil Filler
526	**93343**	Screw–Tank Bracket Mtg. (Used to Mount Tank Bracket to Cylinder on engines using No. 296591 and 296592 Fuel Tanks.)
527	**221279**	Clamp–Breather Tube
528	**230634**	Tube–Breather
529	**67608**	Grommet–Breather Tube
530	**296304**	Housing Assembly– Pawl
531	**230615**	Ratchet–Top Starter
532	**260500**	Washer–Spring
533	**67478**	Knob–Stop
534	**93322**	Screw–Air Cleaner
535	**27987**	Element–Air Cleaner
536	**296766**	Cleaner Assembly–Air
538	**260683**	Rod–Speed Control (square rod)
	Note:	For Round Wire Rod order: **260560** Rod– Speed Control
539	**260684**	Link–Control Rod (Used only with square rod)
540	**221380**	Lever–Speed Adjuster
	Note:	**220678** Lever–Speed Adjuster Used on type No. 0204.
541	**22398**	Washer–Speed Adjuster to Carburetor
542	**91359**	Screw–Machine, Fil. Hd.–10-32 x 3/4''
	Note:	**91494** Screw–Machine, Fil. Hd.–10-32 x 3/8'' **221372** Clip–Speed Control Rod Used only with round wire control rod
544	**296769**	Armature–Starter
545	**296770**	Case Assembly–Long Shaft End
546	**296775**	Case Assembly– Short Shaft End
547	**270025**	Washer–Fiber
548	**221381**	Washer–Thrust (Steel)
608	**294259**	Starter Assy.–Rewind
	Note:	For 110 Volt Electric Starter Kit–order No. 295325.
609	**260564**	Spring–Throttle Link Used on type No. Series 9000 to 9200 and 952010 to 952999.
611	**297219**	Pipe–Fuel, (Long) Plastic
	Note:	Brass Pipes are not replaced; only the Screen Housing (Ref. No. 454) is to be replaced.
612	**296811**	Pipe–Fuel, (Short) Plastic
632	**26336**	Spring–Governor Cont Lever
633	**93364**	Screw–Machine, Rd. Hd.–6-32 x 7/8''
634	**270167**	Washer–Throttle Shaft (Felt)
681	**299060**	Needle Valve Kit
822	**296732**	Starter Assy.–Wind-u

60200 To 60297
61200 To 61297

60200 To 60297
61200 To 61297

ORIGINAL

BRIGGS & STRATTON

SERVICE PARTS ®